

1 Choir Aahs

4 **Orch. Hit**
7 **Apogo**

2 Choir Oohs

5 **Ovr. Guitar**
8 **Steel drums**
0 **Woodblock**

3 Synth voice

6 **Synth Str. 2**
9 **Taiko drum**

**1 Whistle**

4 **Shakuhachi**
7 **Breath noise**

**2 Tub. Bells**

5 **Lead 6**
8 **Pad 4**
0 **Seashore**

3 Blown bottle

6 **Lead 7**
9 **Pad 6 metal**

To access, first press any instrument key, then * or # to choose desired instrument

1 Soprano Sax

4 **Baritone Sax**
7 **Flute**

2 Alto Sax

5 **Oboe**
8 **Piccolo**
0 **Pan Flute**

3 Tenor Sax

6 **Clarinet**
9 **Recorder**

**1 Ac. Guitar/Nylon**

4 **Banjo**
7 **Shamisen**

**2 Ac. Guit/Steel**

5 **Harp**
8 **Dulcimer**
0 **Koto**

3 Elec. Guitar

6 **Guitar Harm.**
9 **Kalimba**

1 Elec. Bass F.

4 **Fretless bass**
7 **Slap bass 2**

2 Elec. Bass Pic

5 **Ac. bass**
8 **Tuba**
0 **Timpani**

3 Contrabass

6 **Slap bass 1**
9 **Lead Sq. w.**

**1 Trumpet**

4 **French horn**
7 **Mut. trump.**

**2 Trombone**

5 **Brass 1**
8 **Ocarina**
0 **Synth brass 2**

3 Tuba

6 **English horn**
9 **Synth brass 1**

1 Violin

4 **Contrabass**
7 **Str. Ensem. 1**

2 Viola

5 **Tremolo St.**
8 **Str. Ensem. 2**
0 **Fiddle**

3 Cello

6 **Pizzicato**
9 **Synth Str. 1**

**1 Lead 1 (Sq.)**

4 **Chiff**
7 **Warm pad**

**2 Sawtooth**

5 **Charang**
8 **Polysynth**
0 **Metal pad**

3 Caliope

6 **Bass + Lead**
9 **Pad choir**

1 Ac. Gnd. Piano

4 **H/kytonk P.**
7 **Harpsichord**

2 Br. Ac. P.

5 **Elec. Piano 1**
8 **Clavinet**
0 **Marimba**

3 Elec. Gnd. Piano

6 **Elec. Piano 2**
9 **Celesta**

**1 Church organ**

4 **Rock organ**
7 **Harmonica**

**2 Drawb. organ**

5 **Reed organ**
8 **Tango acord.**
0 **Music box**

3 Perc. organ

6 **Acordeon**
9 **Bagpipe**

(Instruments in **Bold** are the primary instrument for that group)



The ENSEMBLE key on the lower left puts 18 alternate instrument combinations at the touch of your finger. First press the ENSEMBLE key and then one of the instrument or number keys.

To return to the original instrumentation while playing, simply hold the PLAY key down until the default screen appears.

